

SELF DIAGNOSIS (ONLY FOR FATC AIR CONDITIONER)

► Self Diagnosis

1. Starting Self Diagnosis

Turn the ignition switch to ON position and press OFF switch for more than 5 seconds within 10 seconds.

2) Check LED segments on the vacuum fluorescent display (VFD).



1) Press OFF switch more than 5 seconds.

CHANGED BY	
EFFECTIVE DATE	
AFFECTED VIN	